

CPC464
MICRO COMPUTER
CTM640
COLOUR MONITOR
GT64 GREEN MONITOR
SERVICE MANUAL

Price: £5.00

CONTENTS

	Page
Technical Specification	2
Flash Test	2
CPC464 Cabinet Parts List	2
CPC464 Keyboard Cabinet Drawing	3
Cassette Mechanism and Parts List	4, 5, 6
Cassette Deck Alignment Instructions	6
CPC464 Cassette PCB	7
CPC464 Cassette Deck Circuit Diagram	8
CPC464 Basic Hardware Analysis	
Cassette & Software Analysis	10
CPC464 Function Diagrams	10 & 11
CPC464 Main PCB	12, 13 & 14
CPC464 Circuit Diagram	15 & 16
CPC464 Electrical Parts List	17
GT64 Cabinet Drawing and Parts List	18
GT64 Circuit Diagram & Voltages	19
GT64 Main PCB & Alignment Instructions	20
GT64 Electrical Parts List	21
CTM640 Cabinet Drawing & Parts List	22
CTM640 Electrical Parts List	23 & 24
CTM640 Alignment Instructions	23
CTM640 Voltages	24
CTM640 Circuit Diagram	back pull out
CTM640 PCB	back pull out

SAFETY TEST

All monitors are safety tested to the following specifications.

- 1). Flash Test Test at 4kV between the live and neutral of the mains lead joined together and ALL accessible metal points on the exterior of the set.
- 2). Insulation Resistance Test Test between the live and neutral of the mains lead joined together and ALL accessible metal points on the esterior of the set to show a resistance of at least 4Mohm.

If after servicing there is any doubt about continued electrical safety the above tests should be carried out.

TECHNICAL SPECIFICATION

LSI CHIPS:

Z80A processor running at 4MHz

64K bytes of RAM (over 42K available to user) bytes of ROM containing BASIC and the 32K operating system

CRT controller device 6845 sound generator chip

AY-3-8912 3 voice, 7 octave parallel I/O device interface to the GI

sound chip

DISPLAY SPECIFICATION:

	Normal	Mode High Res.	Multiclr.
No. of	4 from	2 from	16 from
Colrs.	27	27	27
Vert.	200	200	200
Dots.			
Horiz.	320	640	160
Dots.			
Horiz.	40	80	20
Chars.			

KEYBOARD:

74 keys — qwerty style, numeric cluster, cursor and copy cursor, large enter, shift, caps lock, tab, escape, delete, clear, control.

DATACORDER:

Write speed software selectable — 1K baud or 2K baud, read speed automatically established by software. Write protect interlock. Motor on/off controlled by software.

ADD-ON ABILITY:

Compact floppy disk drive system including CP/M* and LOGO language.

Centronics compatible printer.

Joystick(s).

Additional ROM's.

Additional RAM up to 8160K.

EXTERNAL SOCKETS:

PCB edge connectors for general purpose expansion and Centronics parallel printer.

9 Pin socket for joystick

6 Pin socket for — RGB and sync
— composite video

- luminance and sync

3.5mm socket for stereo sound output 5mm socket for CPC464 power supply (supplied exclusively from screen)

DIMENSIONS (mm):

			w	11	u
Keyboard		:	580	70	170
CTM640		:	375	340	365
GT64		:	305	315	335

WEIGHTS (kg):

Keyboard `	:	2.4
CTM640	:	10.6
GT64	:	6.3

POWER SUPPLY:

Screen System: 240V AC 50Hz

(keyboard and datacorder power supplied by screen system)

*CP/M is a registered trademark of Digital Research inc. AMSTRAD and AMSOFT are trademarks of Amstrad Consumer Electronics PLC.

In keeping with our policy of continually improving our service, and technical quality of our products, we reserve the right to change component types, manufacturers, sources of supply or technical specification at any time


Keyboard, Colour Monitor, Green VDU - Designed in U.K.

CPC464 CABINET PARTS LIST


Sym	Description	Part No.
1	Top Cabinet 3 Ribs	170001
2	On/Off Switch	170002
3 4	Vol. Control Pot.	170003
5	Knob Vol. Control LED Red	170004 170005
6	Cassette Lid	170005
7	Key Board Assy.	170007A
	Z.7D101	
7	Key Board Assy. Z70102	170007B
8	Rubber Contact mat.	170008
9	Key Board Rubber Contact Mat	170009
	Digit	170003
10	Rubber Contact Mat Spacer	170010
11	Bottom Cabinet	170011
1	3 Ribs	.=
12	Cassette Mechanism	170012
13	Tape Counter	170013
14 15	Counter Belt Record Button Cass.	170014
16	Play Button Cass.	170015 170016
17	Rewind Button Cass.	170016
18	Fast Forward Button	170017
	Cass.	
19	Stop/Eject Button Cass.	170019
20	Pause Button Cass.	170020
21	Cass. Door Spring	170021
22	I/O Socket	170022
23	User Port Socket	170023
24	D.C. Socket	170024
25	DIN Socket	170025
26	Inlay Main	170026
27	Inlay Cassette	170027
28	Keyboard Contact	170028
29	P.C.B. /A Keyboard Contact	170029
	P.C.B. /B	170000
30	Bottom Cabinet 5 Ribs	170030
31	Top Cabinet 5 Ribs	170031
32	Speaker	170124
-		


AMSTRAD CONSUMER ELECTRONICS PLC BRENTWOOD HOUSE, 169 KINGS ROAD, BRENTWOOD, ESSEX CM14 4EF Telephone: Brentwood (0277) 228888 Telex: 995417 AMSELÉ G

CPC464 CABINET DRAWING

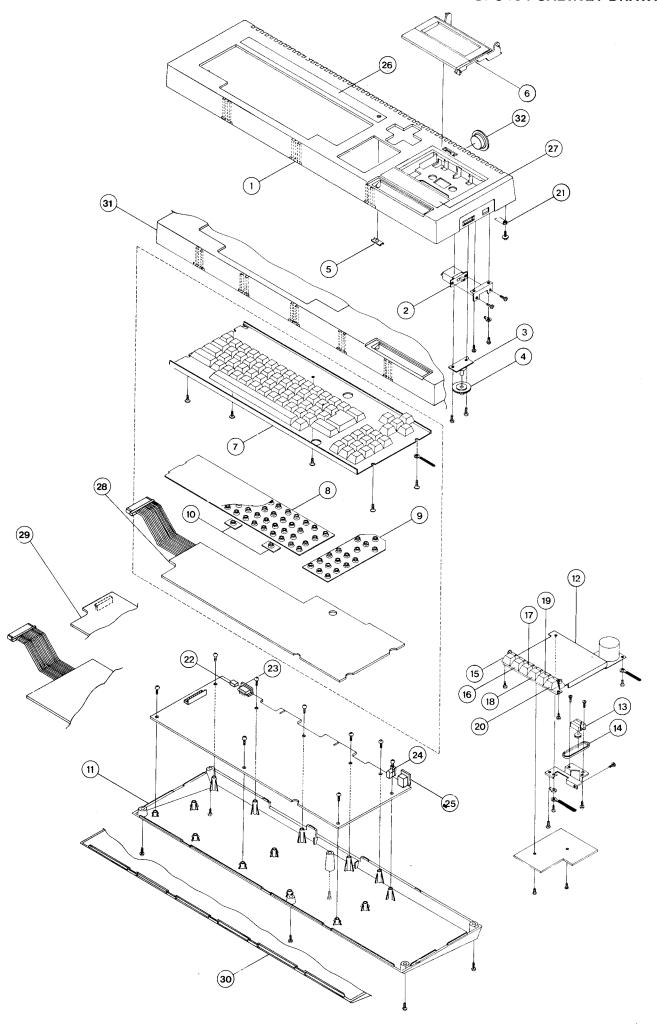

CASSETTE MECHANISM

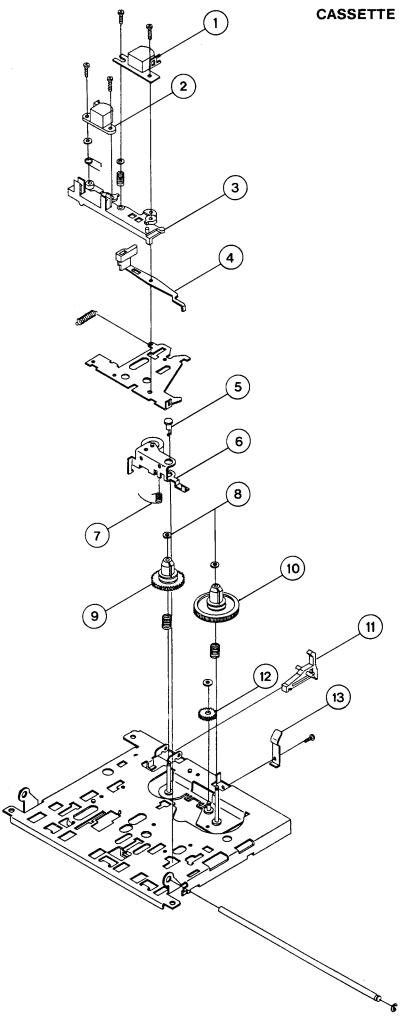

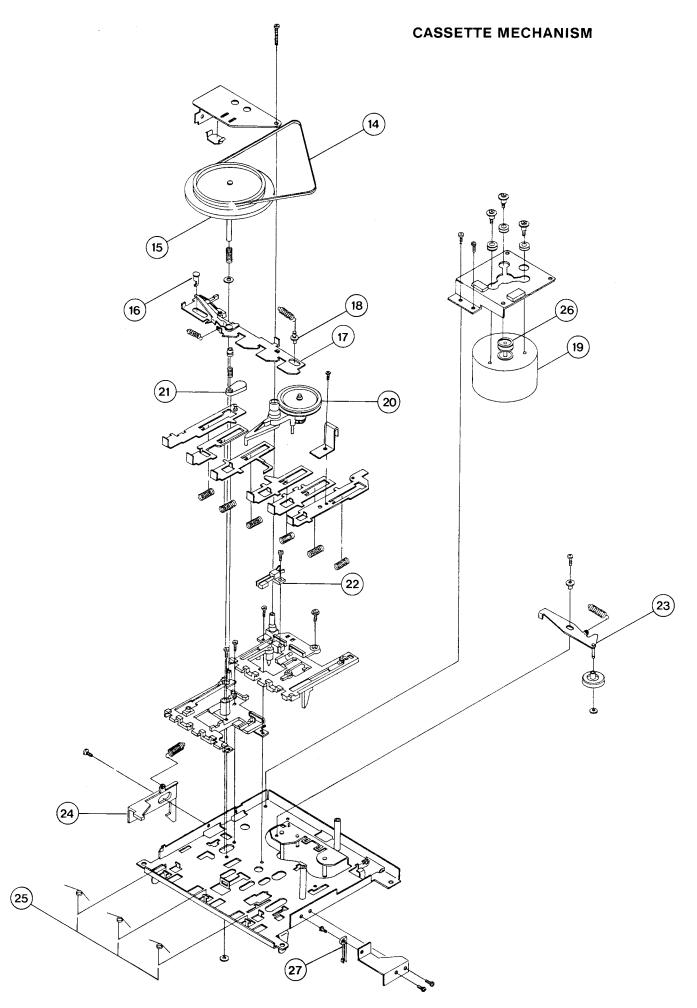

PC--/ F2588

CPC464 CASSETTE MECHANISM PARTS LIST

1. R 2. E 3 H 4. A 5 S 6 P 7 S 8. F 9 R	Description A/P Head Frase Head Head Base Luto Stop Arm Hopper Pinch Roller Assembly Expring Pinch Roller Libre Washer	Part No. 170201 170202 809170 809171 809172 809162 809161
2. E 3 H 4. A 5 S 6 P 7 S 8. Fi 9 R	rase Head lead Base luto Stop Arm topper linch Roller Assembly pring Pinch Roller ibre Washer	170202 809170 809171 809172 809162
4. A 5 S 6 P 7 S 8. Fi 9 R	lead Base Luto Stop Arm Stopper Pinch Roller Assembly Spring Pinch Roller Jibre Washer	809170 809171 809172 809162
4. A 5 S 6 P 7 S 8. Fi 9 R	auto Stop Arm Stopper Pinch Roller Assembly Spring Pinch Roller Sibre Washer	809171 809172 809162
5 S 6 P 7 S 8. Fi 9 R	topper Pinch Roller Assembly Spring Pinch Roller Sibre Washer	809172 809162
8. Fi	rinch Roller Assembly pring Pinch Roller ibre Washer	809162
8. Fi	pring Pinch Roller ibre Washer	
8. Fi	ibre Washer	809161
9 R		
		809175
110 IT	Rewind Spool	809160
	ake Up Spool	809159
	lecord Safety Lever	809158
1 . — 1 . —	dler Gear	809173
	ack Up Spring	170203
1	lain Belt	170204
	lywheel_	809156
	ocking Plate Stopper *	170205
	ocking Plate	170206
	pring Post Locking Plate	170207
	lotor	170208
	ller Assembly	809155
	ause Lock Plate	809168
	eaf Switch	809157
) l	F. Idler Arm Assembly	809152
	ject Lever Cassette Door	170209
	pring Cassette Buttons	170210
	lotor Pulley	170211
27 Le	eaf Switch	170212


CASSETTE DECK ALIGNMENT INSTRUCTIONS

To check cassette module independently of the C.P.U. connect 5V DC across points B(–) and C(+), and link E to G and H to F. The cassette will then operate in an audio mode.


(See page 8 - Cassette Circuit Diagram)

Equipment Required: Frequency Counter, A.V.O., V.T.V.M., Oscilloscope & Test Tape.

STEP	FUNCTION	SIGNAL IN	SIGNAL OUT	METHOD	REMARKS
1.	Cassette Azimuth Adjustment.		Monitor V.T.V.M.	1) Insert Test Tape recorded at 6kHz constant. 2) Set Volume to maximum on CPC464. 3) Connect V.T.V.M. to Pin 7 of I.C.302 to read between 330mV to 520mV. By adjusting azimuth screw on the cassette head.	Monitor switched on and fix connections.
2.	Speed Check.	Put the standard tape in the cassette mechanism.	Monitor Oscilloscope.	Check output from the tape on the oscilloscope. The range to be used is 100uS.	Speed variation ±4% will not affect software loading.

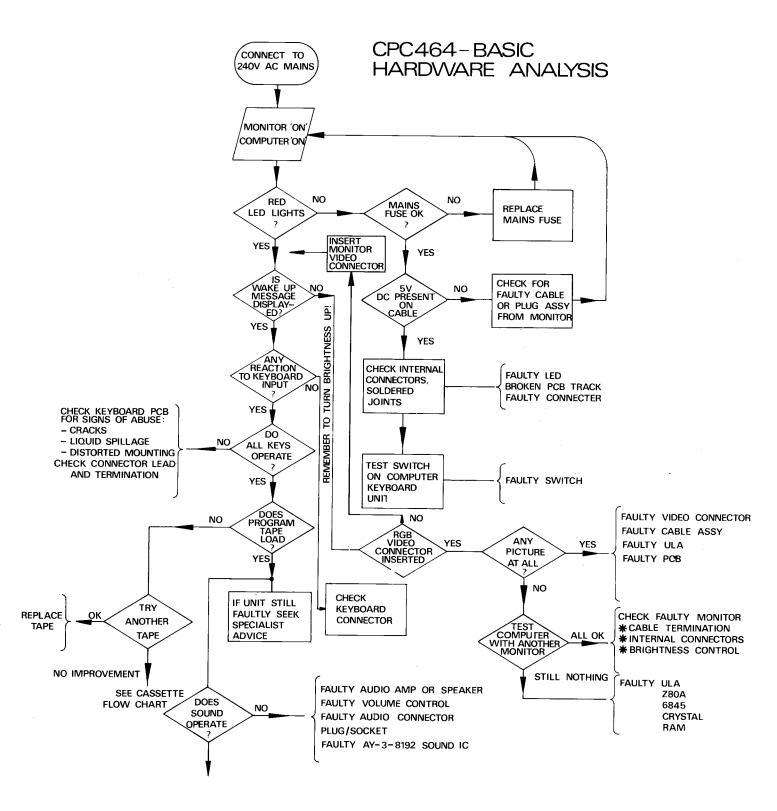


CASSETTE & SOFTWARE ANALYSIS

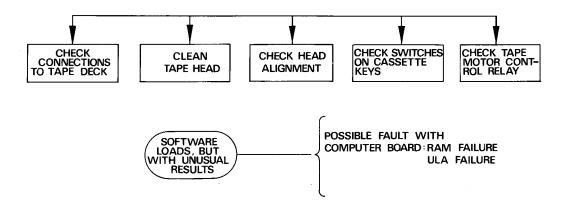

Full diagnostic teste on the C.P.U. can be carried out using the Amstrad RP1 Test Pack. Please contact Amstrad PLC for information on same.

N.B ACTUAL 'PHYSICAL' DAMAGE TO SOFTWARE TAPE WILL PREVENT IT FROM LOADING AT ALL: IE THERE WILL BE NO HALF WORKING PROGRAMS. THEY EITHER LOAD-OR THEY DON'T.

CPC464 FUNCTION DIAGRAMS

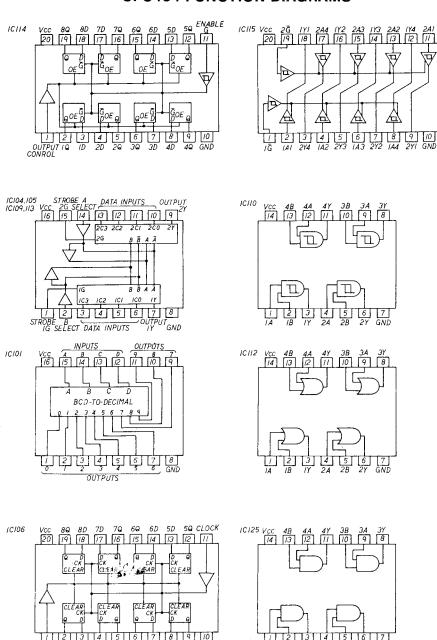



CPC464 FUNCTION DIAGRAMS


FUNCTION FOR A MICROCOMPUTER AND IC'S


IC108	
vss /	40 VSYNC
RES 2	39 HSYNC
LPSTB 3	38 RAO
MAO 4	₽7 RAI
MAI 5	36 RA2
MA2 6	35 RA3
маз [7]	34 RA4
MA4 8	33 Do
MA5 9	32 DI
MA6 10	31 D2
MA7 [//	30 D3
MA8 12	29 M
MA9 13	28 D5
MAIO [4]	27 D6
MAII 15	26 D7
MA12 16	25 cs
MA 13 17	24 RS
DISPTMG 18	ख़ि <i>≡</i>
CUDISP 19	22 R/W
Vcc 20	21]CLK

	IC107	_		_	IC 111	,	
I/O PORT A PA I **	7	40 PA 4 39 PA 5 38 PA 6 37 PA 7	ADRESS VO BUS PORT A	A11+1 A12+2 A13+3 A14+4		40 → A10 39 → A9 38 → A8	100500
READ INPUTS RD - INPUTS RD - SELECT CS - GND	-6 -6 -7 -8	36 + WR 35 + RES 34 + Do 33 + Di	WRITE CONTROL ET INPUTS DATA BUS	A/5 - 5 Ø - 6 D4 - 7 D3 - 8		35 → _{A5} 34 → _{A4} 33 → _{A3}	ADRESS BUS
ADRESS A0 = PC6 = PC5 = PC	- 9 - 10 - 11 - 12	32 D2 31 D3 30 D4 29 D5	DATA BASS	D5** [9] D6 ** [10] +5V - [1] D2 ** [12]		32 → _{A2} 31 → _{A1} 30 → _{A0} 29 ← GND	
VO PC4 ** PORT C PC0 ** PC1 ** PC2 **	-15	28 D6 27 D7) 26 Vcc 25 PB7	DATA BUS	D1 [3] D0 [4] D1 [5] INT [6]		28 → RFSH 27 → MT 26 ← RESE 25 ← DUSI	CONTROL CONTROL CONTROL CONTROL CONTROL
I/O PORT B PB1 + PB2 +	- B - F	24 PB6 23 PB5 22 PB4 21 PB3	CONTROL H. PORT B SYSTEM M.	NMI + [7] ALT + [8] REQ + [9] DRQ + 20		24 - WATT 23 -+ BÜSA 22 -→ WR 21 -→ RD	CONTROL

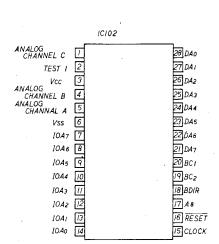

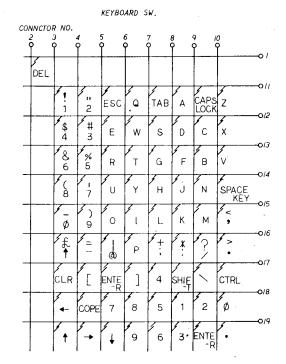

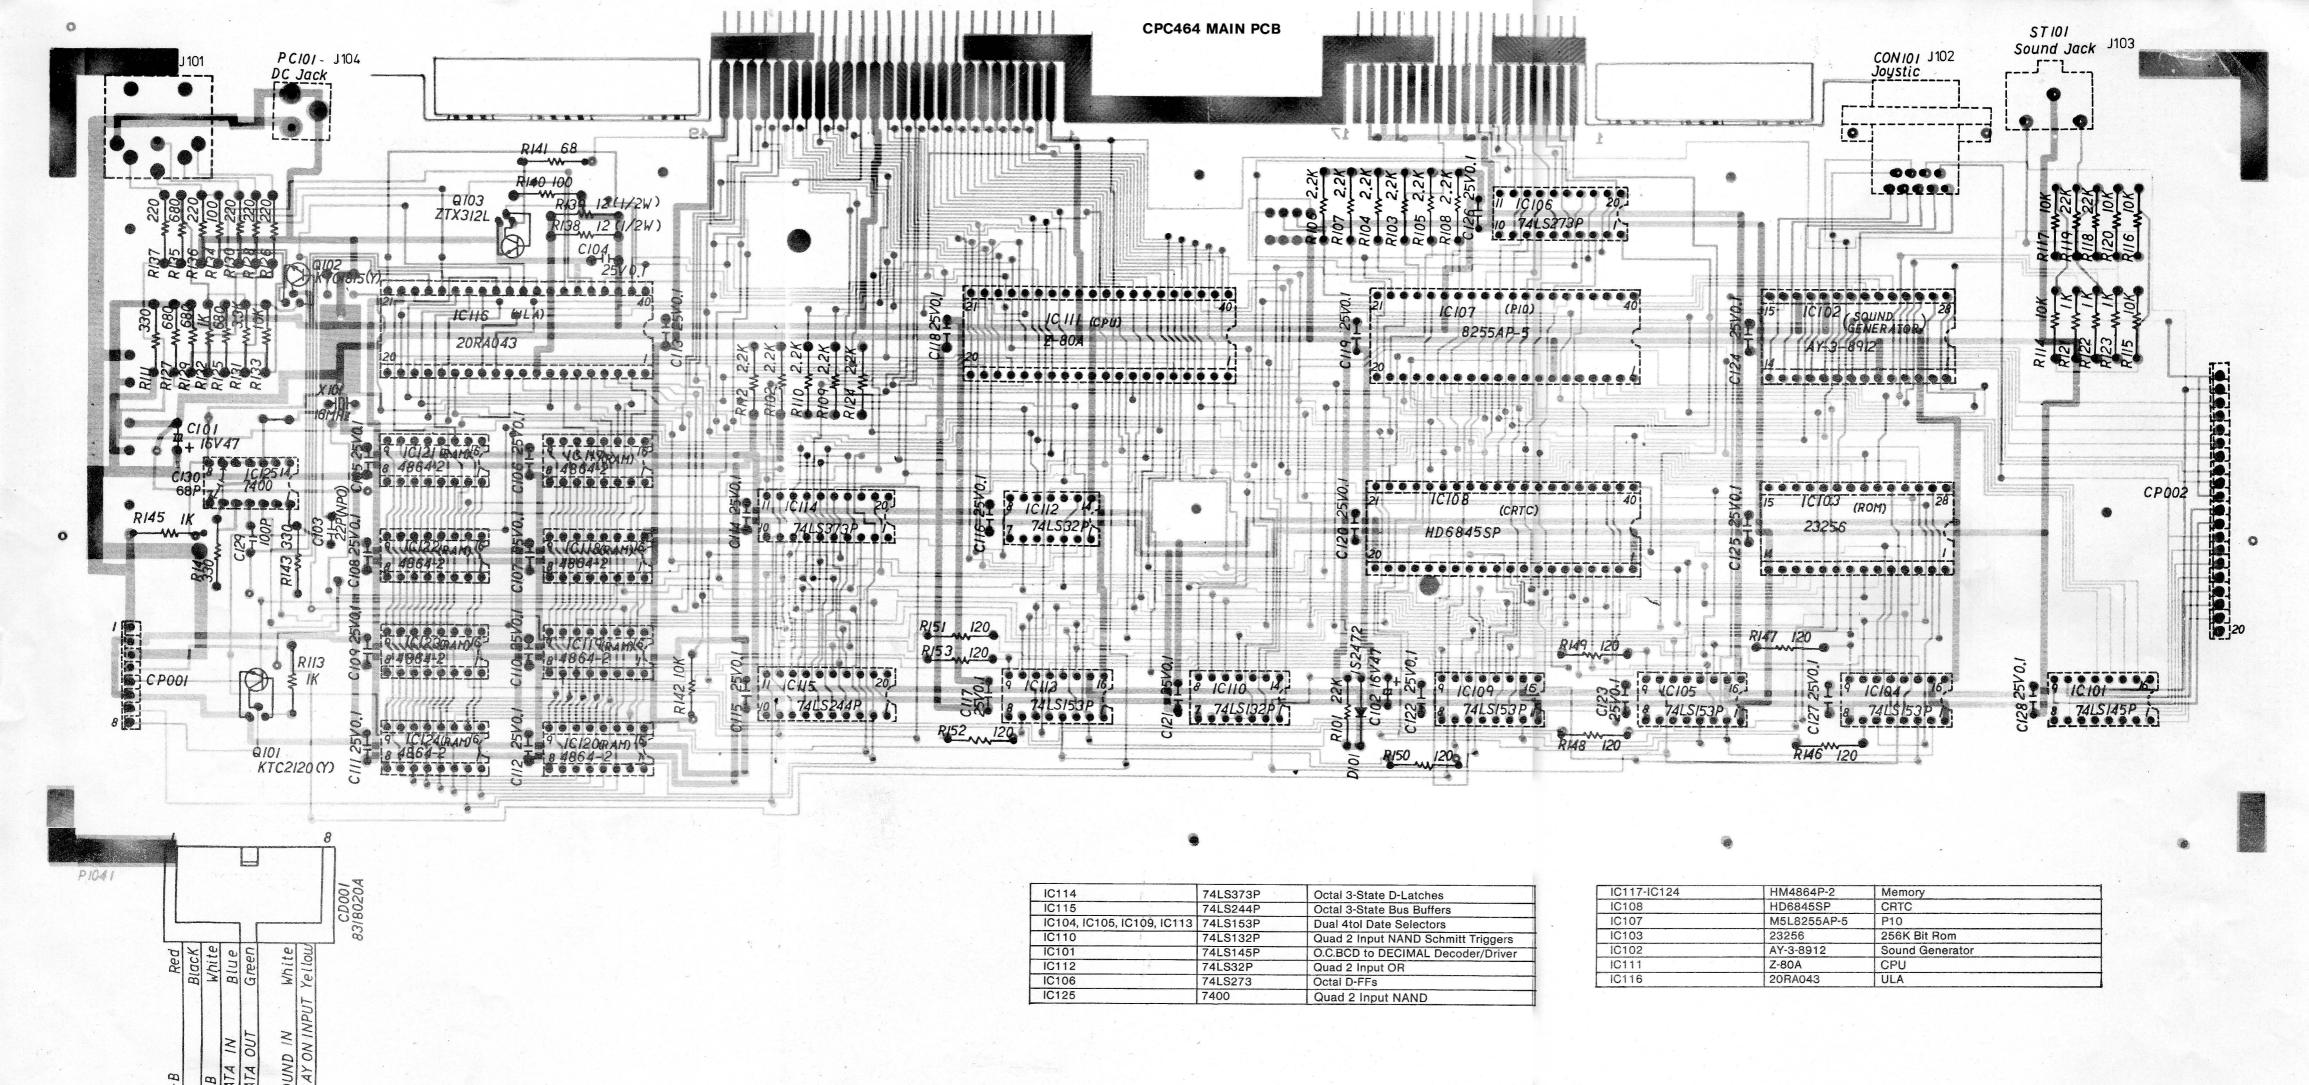


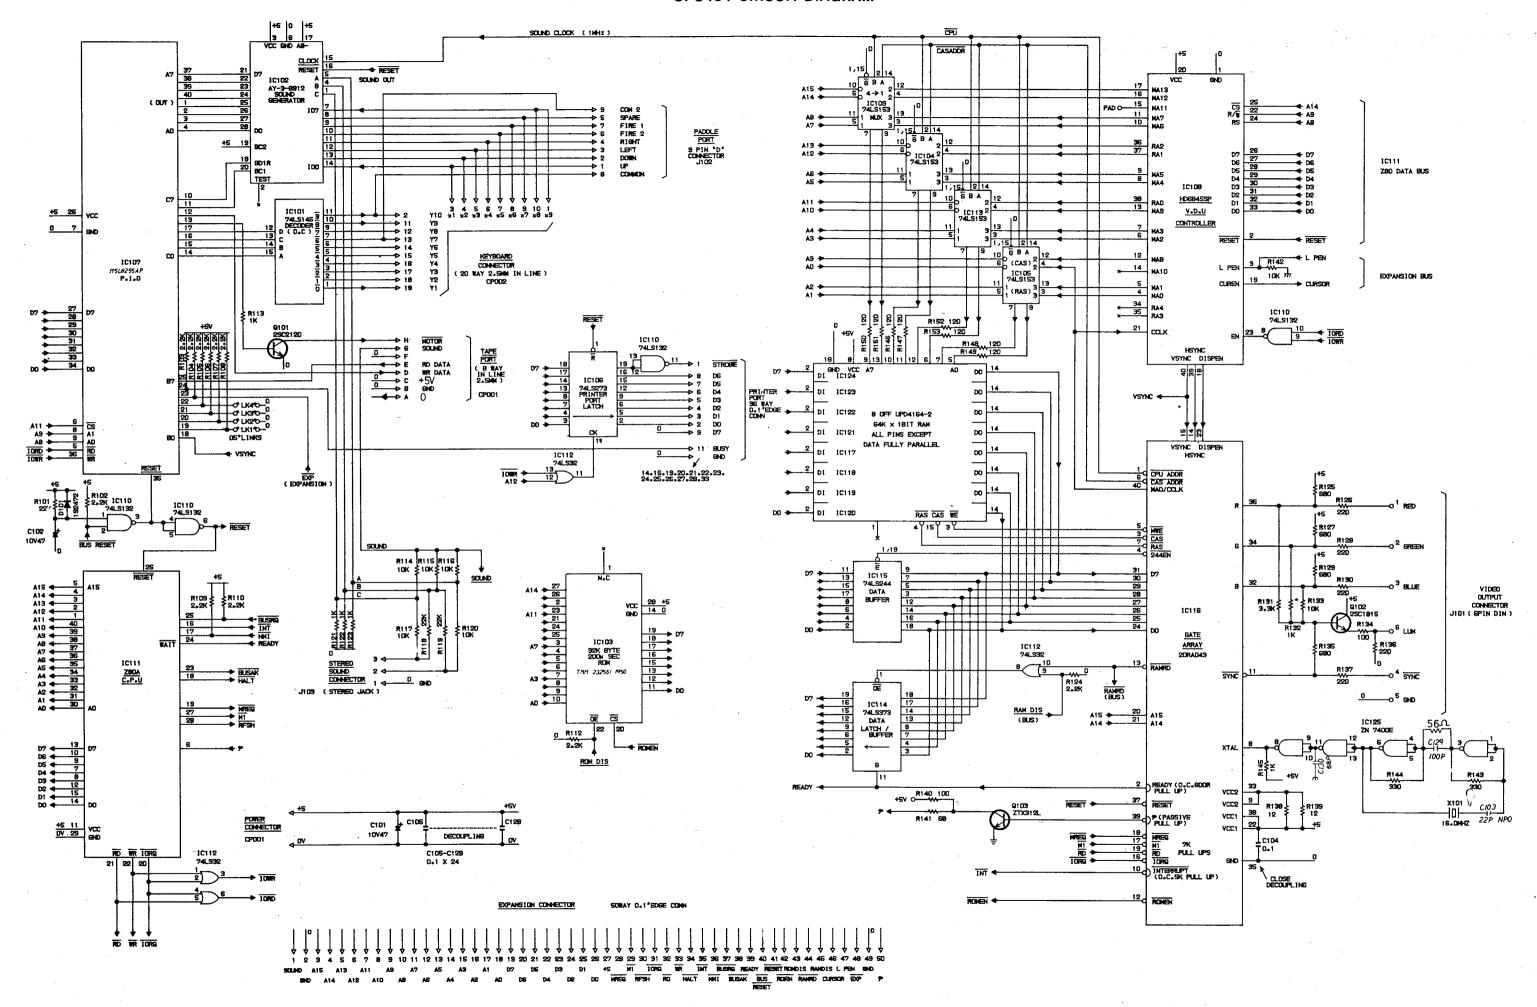



CPC464 ELECTRICAL PARTS LIST

Value	Circuit Reference	Part No.
Carbon Film F	Resistors (all 1/4W unless shown	otherwise)
56ohm	R306	10022
680hm	R141	10028
100ohm 120ohm	R134, 140 R146-153	10032
1800hm	R315	10034
220ohm	R126, 128, 130, 136, 137	10040
330ohm	R143, 144	10044
560ohm	R154, 313, 325	10050
680ohm	R125, 127, 129, 135, 301	10052
820ohm 1kohm	R324 R113, 121-123, 132, 145	10054
2k2ohm	R102-112, 124	10069
3k3ohm	R321	10073
4k7ohm	R320, 323	10077
5k6ohm	R314	10079
10kohm	R114-117, 120, 133, 142,	10085
12kohm	309, 312 R318	10087
18kohm	R308, 311	10087
22kohm	R101, 118, 119, 304, 305	10093
33kohm	R319, 322	10097
47kohm	R302, 303, 307	10101
180kohm 1Mohm	R317	10115
120hm(½ W)	R316 R138, 139	10147 170126
	.	170120
Electrolytic Ca		1 00000
1uF/50V 10uF/16V	C309, 311, 314 C324	20062
22uF/10V	C308, 318	20024
47uF/10V	C101, 102, 303, 306	1400244
100uF/10V	C301, 304	20028
100uF/16V	C315	20028
470uF/10V	C322	1400248
Ceramic Capa		
33pF/50V 200pF/50V	(C316 C321	150514
220pF/50V	C310	400107 400107
270pF/50V	C313	170126
470pF/50V	C307	24004
0.001uF/50V	C320	24007
0.022uF/50V 0.1uF/25V	C317, 319, 323 C104-128	24013
		24020
Polystyrene Ca 0.001uF	ipacitors I C312	170017
0.001uF 0.01uF	C312 C305	170217 170128
0.068uF	C302	170128
Circuit Ref.	Description	Part No.
I.C.s	·	' '
IC101	HD74LS145	170101
IC102	AY-3-8912	40001
IC103	TMM-23256P-1950	170102
IC104, 105, 109, 113	HD74LS153	170103
IC106	HD74LS273	170104
IC107	M5L8255AP-5	170105
IC108	HK6845SP	170106
IC110, 112	HD74LS132	170107
IC111 IC114	Z8400APS HD74LS373	40080
IC114	HD74LS373	170108 170109
IC116	20RAO43	40007
IC117-124	HM4864U-2	170110
IC125	ZN7400E-D3	40008
IC301	LA4140	170111
IC302	LA6324	170112

pa :		
Circuit Ref.	Description	Part No.
Transistors		
Q101	KTC2120Y KTC1815Y	170113
Q102, 301 Q103	KIC18151 ZTX312L	170114 50001
Diodes		
D101	ı SIL - IS2472 - HL	1 170115
D301	SIL - IN4002	400111
D302	LED - Red. SLP145B	170116
Coils & Tx.		
L301	82uH	170117
T101	C-12	170118
Jacks & Conne	ectors	
J101	DIN Socket 6 Pin	170025
J102	Joystick Socket 9 Pin	170023
J103	Input/Output Socket 3.5mm R.C.A.	170022
J104	DC Jack Socket	170024
J105-112, 116	Socket I.C. 8 Pin Dual In Line	170119
J113	Socket I.C. 14 Pin Dual In Line Socket I.C. 20 Pin Dual In Line	170120
J114, 115	Socket I.C. 20 Pin Dual In Line	170121
Switches		
SW301	Slide Switch R/P	170122
SW302 SW303	Power On/Off	170002
000	Key Board Assembly	170007
Miscellaneous		
VR301	Volume Control 20k	170003
RY301 SP301	Relay Speaker	17,0123
X101	Crystal HC-18/u 16MHz	170124 170125
	2.,2.2 10,0 10,011	1,70120

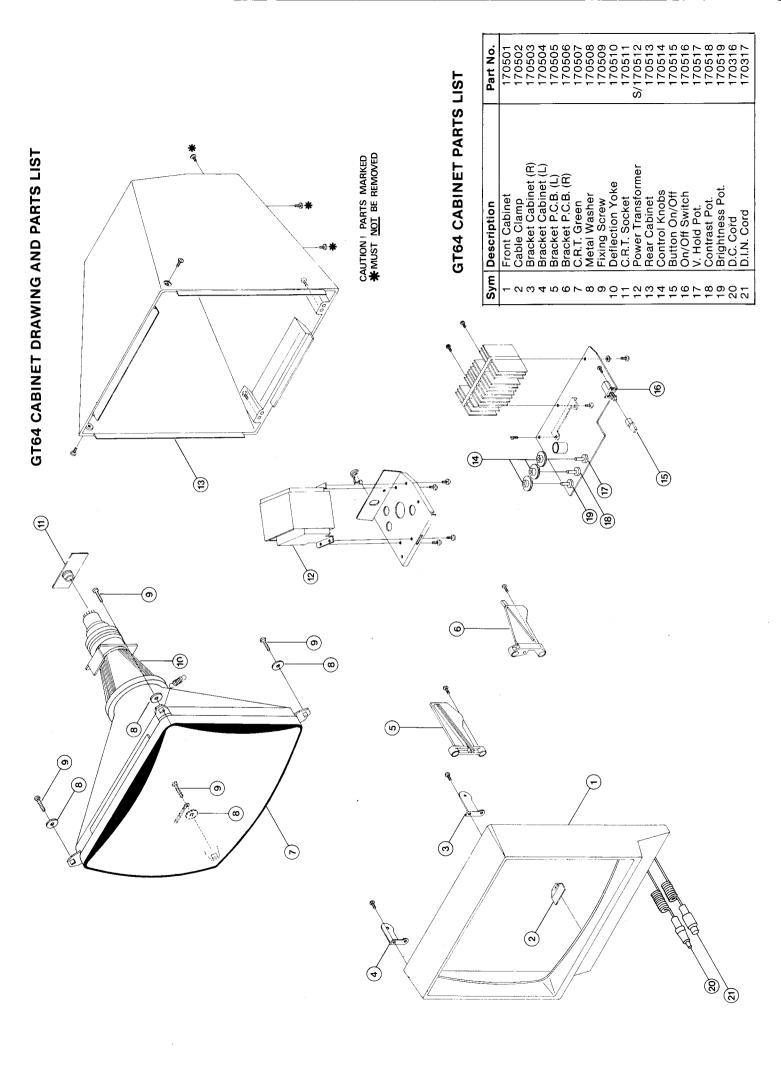

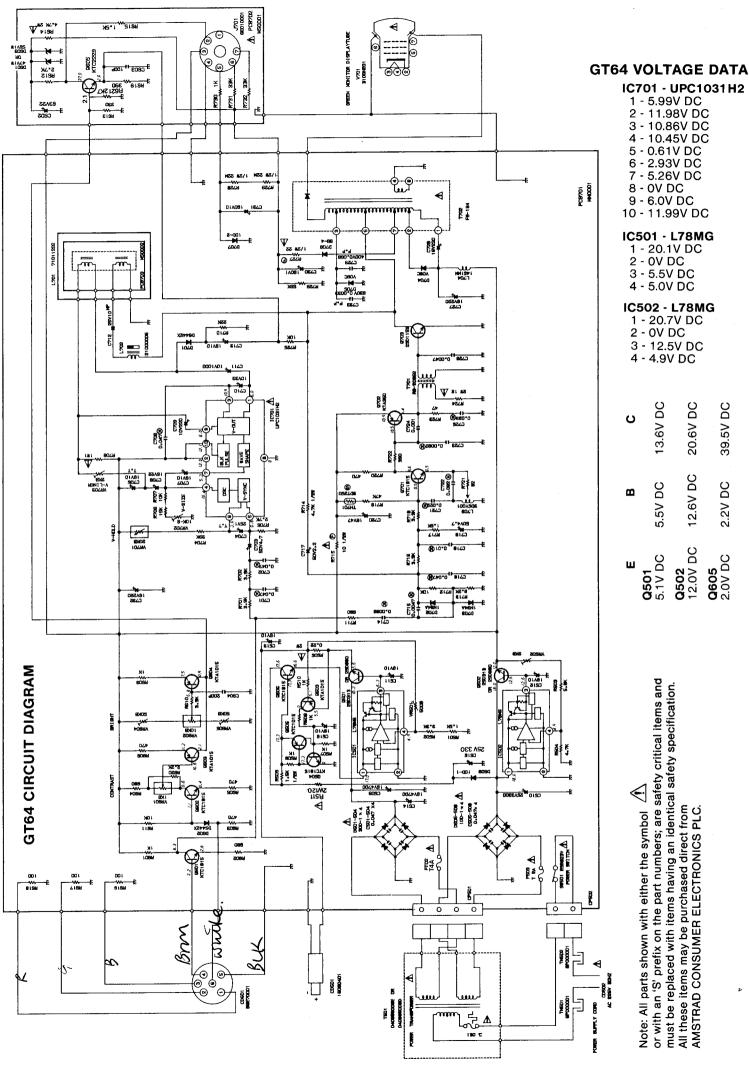

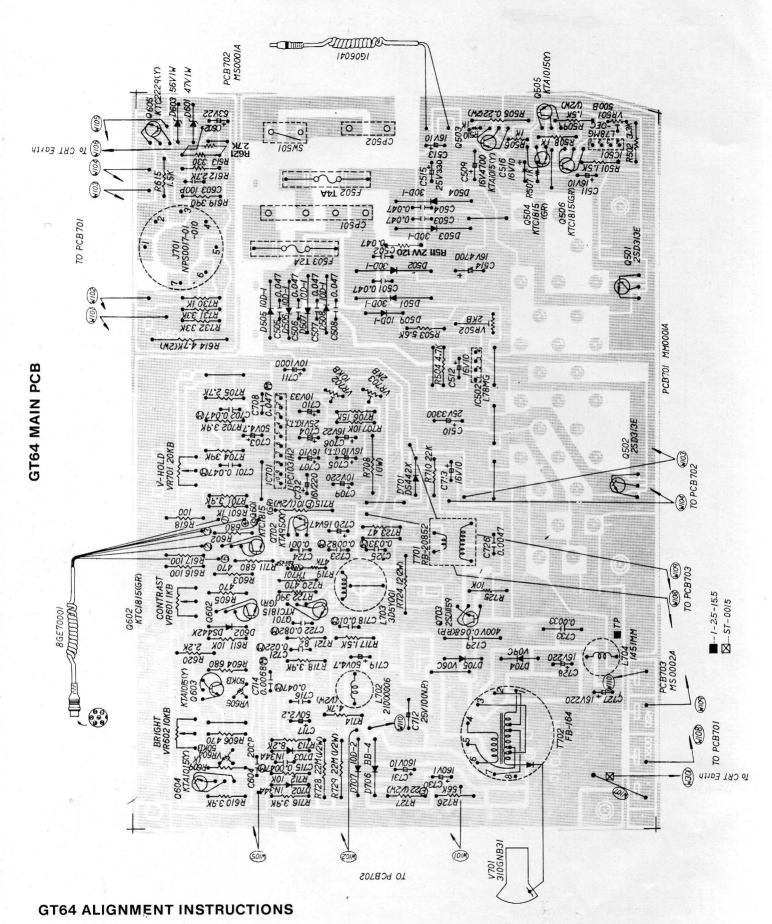


REMARKS METHOD STEP **FUNCTION** SIGNAL IN SIGNAL OUT A.V.O. across C519. Adjust VR501 to obtain 5V. Monitor Switched on 5V Adjustment 2. 12V Adjustment. Monitor switched on. Emitter of Q502 & Earth. Adjust VR502 to obtain 12V. Connect Frequency Counter to CRT Heater. H. Hold. Monitor switched on. Monitor Screen 3. Adjust L703 to obtain 15625Hz on Frequency Top of the page can be adjusted with VR703 and Bottom of the page can be adjusted with VR702. The adjustments are Linearity & V. Size respectively. 4. V. Size & Linearity Page Program for Monitor Screen. Graphics 5. Centering Adjustment. Program Border - 26. Monitor Screen. Adjust the magnet on the back of the neck to centre the border

GT64 ELECTRICAL PARTS LIST

Value	Circuit Reference	Part No.
Carbon Film F	Resistors (1/4W)	1
47ohm	I R723	10021
82ohm	R721	10030
100ohm	R616-618	10032
330ohm	R613	10044
390ohm 470ohm	R619, 722	10046
680ohm	R603-605, 606, 720 R602, 604, 711	10048
1kohm	R506-508, 510, 601, 609,	10061
	730	
1k5ohm	R501, 717	10065
2k2ohm 2k7ohm	R620 R612, 705	10069
3k3ohm	R502	10068
3k9ohm	R610, 701, 702, 716, 718	10075
4k7ohm	R504, 714	10077
5k6ohm	R503	10079
8k2ohm 10kohm	R713	10083
15kohm	R611, 707, 712, 725	10085 10089
22kohm	R710	10093
33kohm	R731, 732	10097
39kohm	R704	10099
47kohm 56kohm	R719 R726	10101
	1	10103
Carbon Film R	1	1
22ohm 1k5ohm	R727	170601
22Mohm	R509, 615 R728, 729	1422126 170602
	l	170002
Metal Film Res		1
1ohm/1W 0.22ohm/2W	R708 R505	170603
4ohm7/2W	R614	170604 170605
120hm/2W	R724	170606
Fuse Type Res	istor	<u> </u>
Fuse Type Res		809256
10ohm/½W	R715	809256
10ohm/½W Ceramic Capac	R715 citors	
100hm/½W Ceramic Capac 100pF	R715 citors C603	1422144
10ohm/½W Ceramic Capac	R715 citors	
10ohm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF	R715 citors C603 C604 C724 C726	1422144 400107
10ohm/½W Ceramic Capac 100pF 200pF 0.001uF	R715 C603 C604 C724	1422144 400107 1400125
10ohm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF	R715 Citors C603 C604 C724 C726 C501-508	1422144 400107 1400125 170600
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V	R715 citors C603 C604 C724 C726 C501-508 pacitors C730	1422144 400107 1400125 170600 24015
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V	R715 citors C603 C604 C724 C726 C501-508 pacitors C730 C717	1422144 400107 1400125 170600 24015 1422151 809246
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V	R715 citors C603 C604 C724 C726 C501-508 pacitors C730 C717 C703, 719	1422144 400107 1400125 170600 24015 1422151 809246 1400240
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V	R715 citors C603 C604 C724 C726 C501-508 pacitors C730 C717	1422144 400107 1400125 170600 24015 1422151 809246
10ohm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V	R715 citors C603 C604 C724 C726 C501-508 pacitors C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712	1422144 400107 1400125 170600 24015 1422151 809246 1400240
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/160V	R715 citors C603 C604 C724 C726 C501-508 pacitors C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608
10ohm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/160V 22uF/160V	R715 citors C603 C604 C724 C726 C501-508 pacitors C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/160V 22uF/16V 22uF/63V	R715 C603 C604 C724 C726 C501-508 C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706 C602	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025 170609
10ohm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/160V 22uF/160V	R715 C603 C604 C724 C726 C501-508 Pacitors C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706 C602 C710	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025 170609 170610
10ohm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/160V 22uF/16V 22uF/63V 33uF/10V	R715 C603 C604 C724 C726 C501-508 C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706 C602	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025 170609
10ohm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/16V 22uF/63V 33uF/10V 47uF/16V 100uF/25V 220uF/10V	R715 C603 C604 C724 C726 C501-508 Pacitors C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706 C602 C710 C720 C720 C515 C709	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025 170609 170610 1400244 800370 170611
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/16V 22uF/63V 33uF/10V 47uF/16V 100uF/25V 220uF/16V 220uF/16V 220uF/16V	R715 C603 C604 C724 C726 C501-508 Pacitors C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706 C602 C710 C720 C515 C709 C727, 728, 732	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025 170609 170610 1400244 800370 170611 20029
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/16V 22uF/63V 33uF/10V 47uF/16V 100uF/25V 22uF/16V 100uF/25V 22uF/16V 100uF/16V	R715 C603 C604 C724 C726 C501-508 Pacitors C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706 C602 C710 C720 C720 C515 C709 C727, 728, 732 C711	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025 170609 170610 1400244 800370 170611 20029 800372
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/16V 22uF/63V 33uF/10V 47uF/16V 100uF/25V 220uF/16V 220uF/16V 220uF/16V	R715 C603 C604 C724 C726 C501-508 Pacitors C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706 C602 C710 C720 C515 C709 C727, 728, 732	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025 170609 170610 1400244 800370 170611 20029
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/16OV 22uF/63V 33uF/10V 47uF/16V 100uF/25V 220uF/16V 100uF/25V 220uF/10V 230uF/10V 3300uF/25V 4700uF/16V	R715 C603 C604 C724 C726 C501-508 Pacitors C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706 C602 C710 C720 C515 C709 C727, 728, 732 C711 C510 C509, 514	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025 170609 170610 1400244 800370 170611 20029 800372 170612
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/16V 22uF/63V 33uF/10V 47uF/16V 100uF/25V 220uF/16V 100uF/25V 220uF/16V 100uF/25V 220uF/16V 100uF/25V 270uF/16V 100uF/25V 270uF/16V 100uF/25V 4700uF/16V Polystyrene Ca	R715 C603 C604 C724 C726 C501-508 C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706 C602 C710 C720 C515 C709 C727, 728, 732 C711 C510 C509, 514 Pacitors (All 50V. D.C. W.)	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025 170609 170610 1400244 800370 170611 20029 800372 170612 170613
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/16OV 22uF/63V 33uF/10V 47uF/16V 100uF/25V 220uF/16V 100uF/25V 220uF/10V 230uF/10V 3300uF/25V 4700uF/16V	R715 C603 C604 C724 C726 C501-508 Pacitors C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706 C602 C710 C720 C515 C709 C727, 728, 732 C711 C510 C509, 514	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025 170609 170610 1400244 800370 170611 20029 800372 170613
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/16OV 22uF/63V 33uF/10V 47uF/16V 100uF/25V 220uF/16V 100uF/25V 220uF/16V 100uF/25V 220uF/16V 1000uF/16V 1000uF/16V 1000uF/16V 1000uF/16V 00047uF 0.0068uF 0.0082uF	R715 C603 C604 C724 C726 C501-508 Pacitors C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706 C602 C710 C720 C515 C709 C727, 728, 732 C711 C510 C509, 514 Pacitors (All 50V. D.C. W.)	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025 170609 170610 1400244 800370 170611 20029 800372 170612 170613
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/16V 22uF/63V 33uF/10V 47uF/16V 100uF/25V 22uF/16V 100uF/25V 22uF/16V 100uF/25V 22uF/16V 100uF/25V 220uF/10V 220uF/16V 1000uF/10V 3300uF/25V 4700uF/16V Polystyrene Ca 0.0047uF 0.0068uF 0.0082uF 0.01uF	R715 C603 C604 C724 C726 C501-508 Pacitors C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706 C602 C710 C720 C515 C709 C727, 728, 732 C711 C510 C509, 514 Pacitors (All 50V. D.C. W.) C715 C714 C723 C718	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025 170609 170610 1400244 800370 170611 20029 800372 170612 170613
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/16V 22uF/63V 33uF/10V 47uF/16V 100uF/25V 22uF/16V 100uF/25V 22uF/16V 100uF/25V 22uF/16V 100uF/25V 220uF/10V 220uF/16V 1000uF/10V 3300uF/25V 4700uF/16V 1000uF/10V 300uF/25V 4700uF/16V 0.0068uF 0.0068uF 0.0082uF 0.01uF 0.022uF	R715 C603 C604 C724 C726 C501-508 Pacitors C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706 C602 C710 C720 C515 C709 C727, 728, 732 C711 C510 C509, 514 Pacitors (All 50V. D.C. W.) C715 C714 C723 C718 C721	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025 170609 170610 1400244 800370 170611 20029 800372 170612 170613 170437 170614 170615 170439 170616
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/16V 22uF/63V 33uF/10V 47uF/16V 100uF/25V 22uF/16V 100uF/25V 22uF/16V 100uF/25V 22uF/16V 100uF/25V 220uF/10V 220uF/16V 1000uF/10V 3300uF/25V 4700uF/16V 1000uF/10V 300uF/25V 4700uF/16V 0.0068uF 0.0047uF 0.0068uF 0.0082uF 0.01uF 0.022uF 0.033uF	R715 C603 C604 C724 C726 C501-508 Pacitors C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706 C602 C710 C720 C720 C515 C709 C727, 728, 732 C711 C510 C509, 514 Pacitors (All 50V. D.C. W.) C715 C714 C723 C718 C721 C725	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025 170609 170610 1400244 800370 170611 20029 800372 170612 170613 170437 170614 170615 170439 170616 170617
100hm/½W Ceramic Capac 100pF 200pF 0.001uF 0.0047uF 0.047uF Electrolytic Ca 1uF/160V 2.2uF/50V 4.7uF/50V 10uF/16V 10uF/25V 10uF/16V 22uF/63V 33uF/10V 47uF/16V 100uF/25V 22uF/16V 100uF/25V 22uF/16V 100uF/25V 22uF/16V 100uF/25V 22uF/16V 1000uF/16V 1000uF/16V 1000uF/16V 1000uF/10V 3300uF/25V 4700uF/16V 100047uF 0.0068uF 0.0082uF 0.01uF 0.0022uF	R715 C603 C604 C724 C726 C501-508 Pacitors C730 C717 C703, 719 C511-513, 516, 705, 707, 713 C712 C731 C706 C602 C710 C720 C515 C709 C727, 728, 732 C711 C510 C509, 514 Pacitors (All 50V. D.C. W.) C715 C714 C723 C718 C721	1422144 400107 1400125 170600 24015 1422151 809246 1400240 20024 20037 170608 20025 170609 170610 1400244 800370 170611 20029 800372 170612 170613 170437 170614 170615 170439 170616

Value	Circuit Reference	Part No.
Polypropylene	-	
0.0033uF/630V 0.068uF/400V	C733 C729	170619 170620
Tantalum Cap	acitors	-
1uF/25V	C704	170621
Circuit Ref.	Description	Part No.
I.C.s		
IC501 IC502 IC701	L78MG - OEC L78MG UPC1031H2	170446 170446 170622
Transistors		-
Q501, 502 Q503, 505, 603, 604	2SD313 KTA1015Y	50005 170453
Q504, 506, 601, 602, 701	KTC1815	170447
Q605	KTC2229Y	170624
Q702 Q703	KTA950Y 2SD1159	170448 170623
	2301139	170623
Diodes		
D501-504 D505-508	Rect. 30D - IFC Rect. 10D - IFC	170625
D509	Rect. 10D - 1FC	1400125
D601	Zen. RD47FB	170626
D602, 701	Sili. DS442X - BT	1422117
D603 D702, 703	Zen. RD56FB Ger. IN34A	170627
D702, 703	Rect. V09C	170628 170629
D705	Rect. V06C	170630
D706	Rect. B B-4	1422116
D707	Rect. 10D-2	1400123
Coils & Transfo		
L701	D.Y. 71011202	170510
L702 L703	Linearity CL. 21000006 Horizontal C.L. 305Y001	170631 170632
L704	C.L. 100uH	1400148
T501	Power Tx. 0866006	S/170512
T701 T704	H.Drive Tx. RB20852 F.B./Lopt FB164	170633
	· · · · · · · · · · · · · · · · · · ·	170634
Variable Resist	-·-	1
VR501 VR502, 703	S.F. 500ohm S.F. 2k	1422189
VR601	ROT. 1k	1400230
VR602	ROT 10k	170519
VR604, 605	S.F. 50k	920142
VR701 VR702	ROT 20k S.F. 10k	170517 1422191
Miscellaneous		1
CD501	D.C. Cord IG060401	170316
CD601	D.I.N. Cord 8GE 70001	170317
F502 F503	3.15A (T) Fuse 2A (T) Fuse	88020
TH701	Thermistor SDT-250S	1400253 170635
V701	C.R.T. 310GNB31	170507

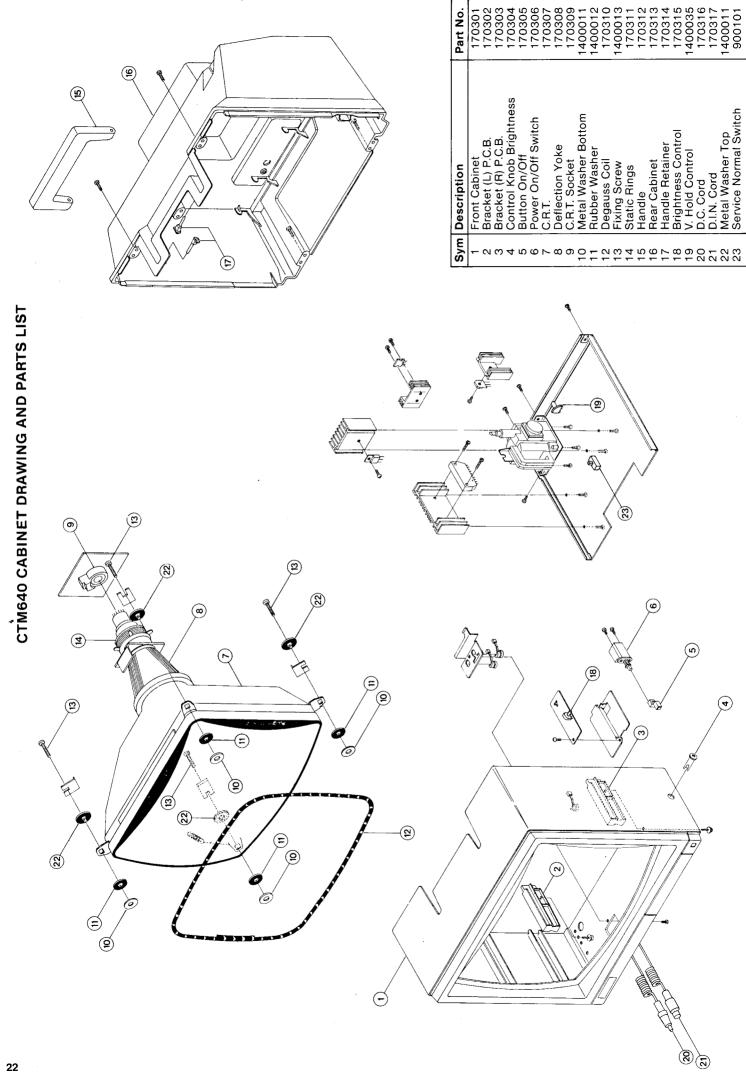

CTM640 ELECTRICAL PARTS LIST

CTM640 ELECT				
Value	Circuit Reference	Part No.		
Carbon Film Resistors (all 1/4W unless otherwise shown)				
100ohm	R810, 901-903	10032		
220ohm	R407, 416	10040		
270ohm	R807, 811, 814	10042		
330ohm	R401, 404, 422	10044		
390ohm	R414	10046		
470ohm	R505, 510	10048		
1kohm	R411, 423, 432, 519, 815,	100.61		
	816			
1k5ohm	R420, 421, 441	10065		
1k8ohm	R402, 403, 442	10067		
2k2ohm	R410	10069		
2k7ohm	R904-906	10068		
4k7ohm	R426, 518	10077		
6k8ohm	R415	10081		
8k2ohm	R406, 418, 419	10083		
10kohm	R424, 428, 429	10085		
12kohm	R409	10087		
15kohm	R431, 450	10089		
27kohm	R425	10095		
39kohm	R440	10099		
47kohm	R412	10101		
56kohm	R417	10103		
82kohm	R430, 439	10107		
180kohm	R408	10115		
220kohm	R413	10117		
270kohm	R504	10119		
680kohm	R451	10129		
1ohm2/1/2W	R443	170401		
470ohm/1/2W	R445	1422125		
680ohm/1/2W	R447	809223		
1kohm/1/2W	R514-517	1400165		
1k5ohm/1/2W	R448	1422126		
2k2ohm/1/2W	R446	170402		
2k7ohm/½W	R802-804	1400166		
180kohm/1/2W	1 '	170403		
1Mohm	R801	1400171		
Fuse Type Resistors				
1ohm/¼W	R521	809252		
8.20hm/1/4W	R444	170404		
10ohm/¼W	R511	809256		
0.82ohm/1W	R438	1422141		
2.2ohm/1W	R435, 437	1400184		
Cement Resistors				
5.60hm/5W	l R501	1422138		
150hm/7W	R436	170417		
	1			

AL PARTS LIST				
Value	Circuit Reference	Part No.		
Metal Oxide Re	sistors			
120ohm/1W 1kohm/1W 3k9ohm/1W 15kohm/1W 0.22ohm/2W 15ohm/2W 33ohm/2W 82ohm/2W 100ohm/2W 3k3ohm/2W 6k8ohm/2W 1ohm/3W	R449 R503 R505 R805, 812 R513 R512 R509 R520 R433 R427 R405 R502	170405 170406 170407 170408 170409 170410 170411 170412 170413 170414 170415		
Electrolytic Ca	pacitors			
1uF/50V 1uF/160V 1uF/160V 1uF/250V 4.7uF/50V 10uF/16V 22uF/10V 47uF/16V 47uF/16V 47uF/16OV 100uF/16V 100uF/16OV 100uF/35V 100uF/400V 220uF/35V 470uF/10V 470uF/25V 470uF/35V 1000uF/25V	C414 C419 C506 C407, 420 C520 C437 C430 C436 C405, 418 C512 C401 C412 C425 C515 C505 C507 C518 C435, 519 C402 C424	20062 1422151 1422152 1400240 20024 170418 170419 170420 1400244 170421 20028 1422157 1400246 170423 20055 170424 20044 1422262 170425		
Ceramic Capacitors				
22pF/500V 100pF/500V 130pF 180pF/500V 240pF 270pF/2kV 330pF 560pF/500V 680pF 2200pF/4kV 0.001uF/500V 0.001uF/2kV 0.0015uF/2kV 0.0022uF/2kV 0.0047uF	C416 C423 C806 C403 C804 C432 C803, 807 C417 C802 C513 C516 C511, 801 C510, 514 C502-504 C508, 509	1400217 1400218 170426 170427 170428 170429 1422255 1400220 1400213 170430 170431 1422147 170432 1400223 170433		

CTM640 ALIGNMENT INSTRUCTIONS

STEP	FUNCTION	SIGNAL IN	SIGNAL OUT	METHOD	REMARKS
1.	Black and White Tracking.		Monitor Screen.	Turn R & B Drive Controls VR804 & VR805 fully counterclockwise. Turn R, G & B Bias Controls VR801, 802, 803 fully counterclockwise. Set Ser. Nor. Switch to Ser. position.	Monitor connected to CPC464.
2.	Black & White Tracking.		Monitor Screen. Monitor Oscilloscope.	1. Adjust 120V at the collector of Q802 with Brightness Control on the Oscilloscope. 2. Rotate the screen control to fully counterclockwise & bring it back to obtain a dim line of one prominent colour. 3. Rotate the other two colours till a dim white line is obtained. 4. Bring Ser. Nor. Switch to Nor. position.	Monitor connected to CPC464. If required, adjust the colour control.
3.	·		If no satisfact	ory results repeat step 2.	
4.	Vertical Size.	Program the paper edge.	Monitor Screen.	Adjust VR406 to obtain paper edge to be 145mm.	Use non magnetic ruler.
5.	Focus Adjustment.	Program the paper edge.	Monitor Screen.	Adjust Focus Control on the Flyback Tx. for maximum definition & details.	Brightness & Contrast controls set to normal viewing.
6.	5V Adjustment	Switch on the Monitor.	AVO Meter.	Connect A.V.O. across C518 & adjust VR501 to obtain 5V exactly.	
	-	Th	is adjustment (6) should no	ot be disturbed under normal conditions.	
7.	Sub Brightness Control.	Switch on the Monitor.	A.V.O. Meter.	Connect A.V.O. to collector of Q802. Adjust VR402 to read 120V.	Keep Brightness Control to maximum position.
8.	Sub H. Hold & H. Hold Adjustment.	Switch on the Monitor.	Frequency Counter.	Rotate H. Hold fully counterclockwise. 1. Adjust VR404 to read 14500Hz. 2. Adjust VR403 to read 15625Hz.	Read the Meter across CRT Heater & Earth.


CTM640 ELECTRICAL PARTS LIST


Value	Circuit Reference	Part No.
Polypropylene		T dit No.
0.012uF/1600V 0.1uF/250V 0.82uF/200V	-	170434 1400202 170435
Polystyrene Ca	pacitors	-
0.0015uF 0.0047uF 0.0056uF 0.01uF 0.015uF 0.039uF 0.047uF 0.068uF	C408 C421 C415 C413, 427 C409 C404 C406 C410, 422, 428	170436 170437 170438 170439 170441 170440 170442 170443
Tantalum Capa	citors	
1uF/16V 2.2uF/16V	C411 C426	1400225 1400226
I.C.s		
IC401 IC402 IC501 IC502	LA7800 UPC1378H STK7308 L78MG	1400106 170444 170445 170446
Circuit Ref.	Description	Part No.
Transistors		
Q401, 402, 504, 506 Q403 Q404 Q405 Q501 Q502 Q503, 505 Q801-803	KTC1815Y KTA950Y 2SC2271 2SD1397 2SD1207 2SD880Y KTA1015Y 2SC3417	170447 170448 170449 170450 170451 170452 170453 170454

		,	
Circuit Ref.	Description	Part No.	
Diodes			
D401	Sil. IS2472T	170455	
D402, 403	Zen. RB11EB	1400124	
D404, 506, 508	Rect. RGP-10K	1422115	
D405, 407, 408	Sil. TVR 06K	170456	
D406	Rect. BB-4	1422116	
D501-504	Rect. IN4007	170457	
D505, 507	Zen. RD 3.6FB	170458	
D509	Rect. RGP 30J	170459	
D510	Zen. SR2M	1400122	
D511	Rect. RGP 30G	170460	
D901-903	Zen. GZA6.2Y	1422114	
Coils & Transfo	ormers		
L401	Linearity Coil 1431MS	1400145	
L501	Line Filter FKOB 160MH14	1400130	
L502	Degauss Coil	170461	
L503	Coil 47uH	170462	
L801	Coil 100uH	1400148	
T401	H. Drive 305Y001	170463	
T402	Pin Cushion 1432MS	170464	
T501	Switching Tx. 8142004	170465	
Switches			
SW401	Slide Switch	900101	
SW501	Power On/Off Switch	170306	
Variable Resist	tors	!	
VR401	Rot. 500ohm	I 170315	
VR401 VR402	S.F. 5k	1400227	
VR403	S.F. 5k	1400227	
VR404	S.F. 2k	1400230	
VR405	Rot. 20k	1400035	
VR406, 407	S.F. 1k	170466	
VR801	S.F. 5k (R)	1400197	
VR802	S.F. 5k (G)	1400198	
VR803	S.F. 5k (B)	1400199	
VR804	S.F. 500ohm (R)	1400200	
VR805	S.F. 500ohm (B)	1400201	
Miscellaneous			
FB401	FB/LOPT 3714004	ı 170467	
F501	Fuse 2A (T)	1400253	
TH501	Degauss Element	1400195	
	ERP.F5BOM180H]	
V001	C.R.T. 3701B22-TC20	170307	

CTM640 VOLTAGES

_		
IC401 - LA7800 1 - 6.35V DC 2 - 6.48V DC 3 - 0.32V DC 4 - 0V DC 5 - 0V DC 6 - 0.85V DC 7 - 3.21V DC 8 - 0.33V DC 9 - 0.93V DC 10 - 5.55V DC 11 - 0.96V DC 12 - 11.04V DC 13 - 0.89V DC 14 - 11.18V DC 15 - 12.43V DC 16 - 4.11V DC	IC402 - UPC1378H 1 - 0V DC 2 - 12.74V DC 3 - 24.4V DC 4 - 0.84V DC 5 - 0V DC 6 - 24.2V DC 7 - 2.5V DC IC502 - LM78M6 1 - 18V DC 2 - 0V DC 3 - 5.4V DC 4 - 5.0V DC	Q405 - 2SD1397 E - 0V DC B - 0.1V DC C - 98.8V DC Q404 - 2SC2271 E - 0V DC B - 0.3V DC C - 34.1V DC

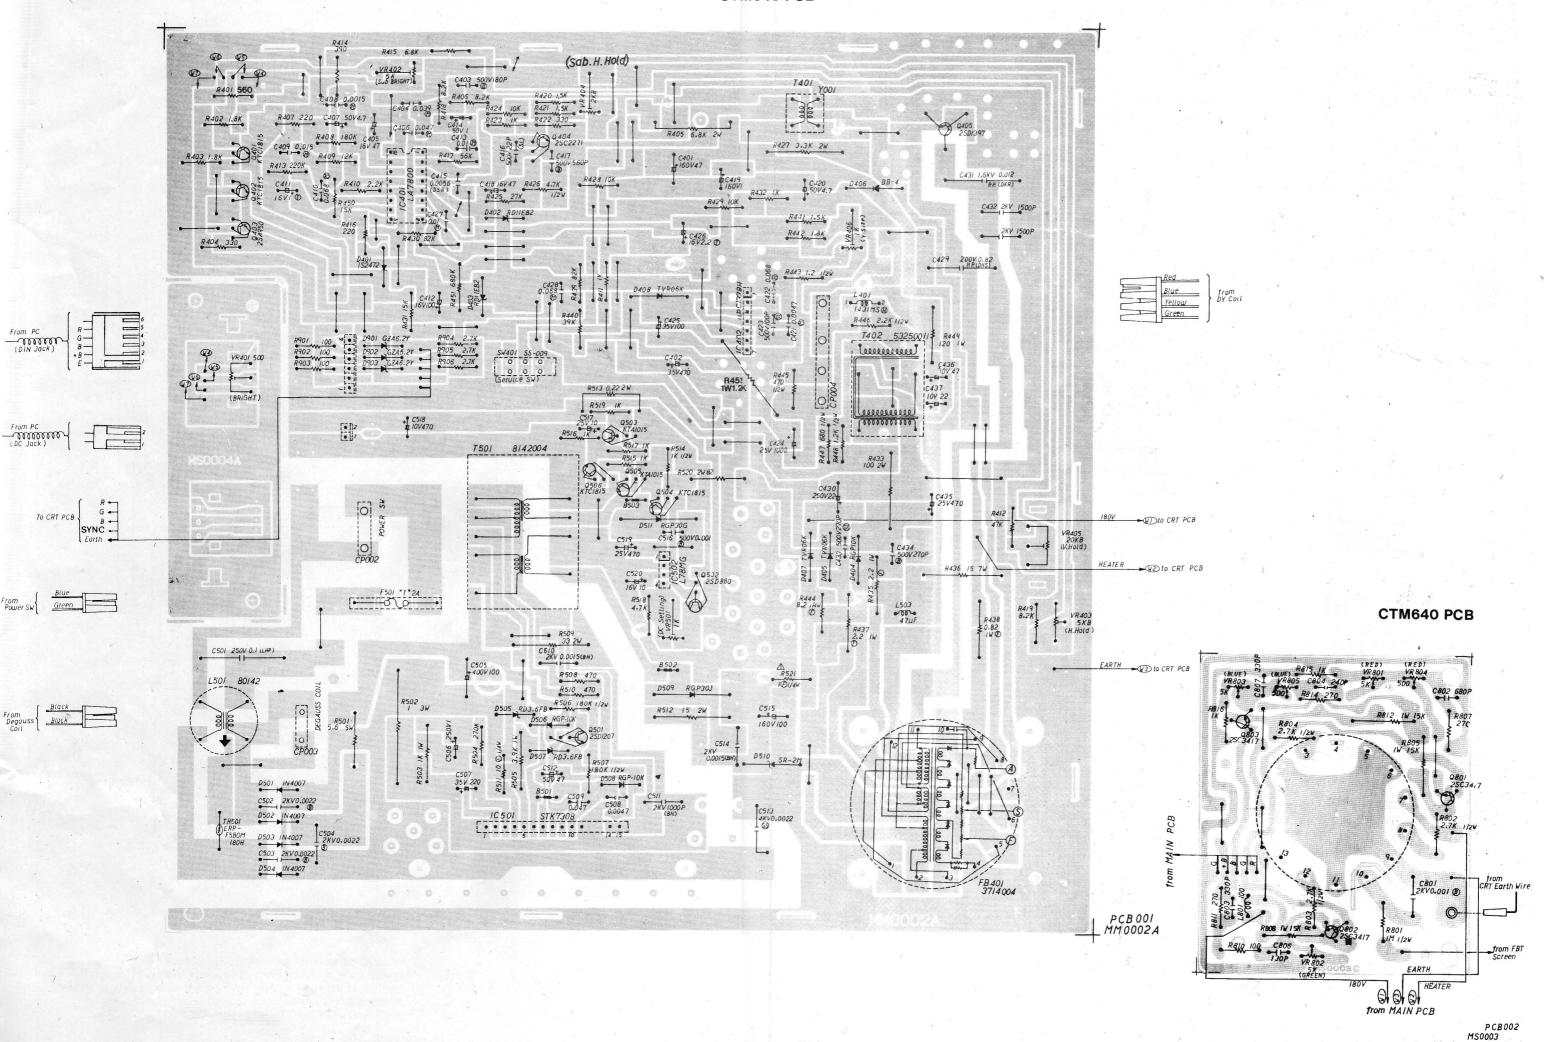

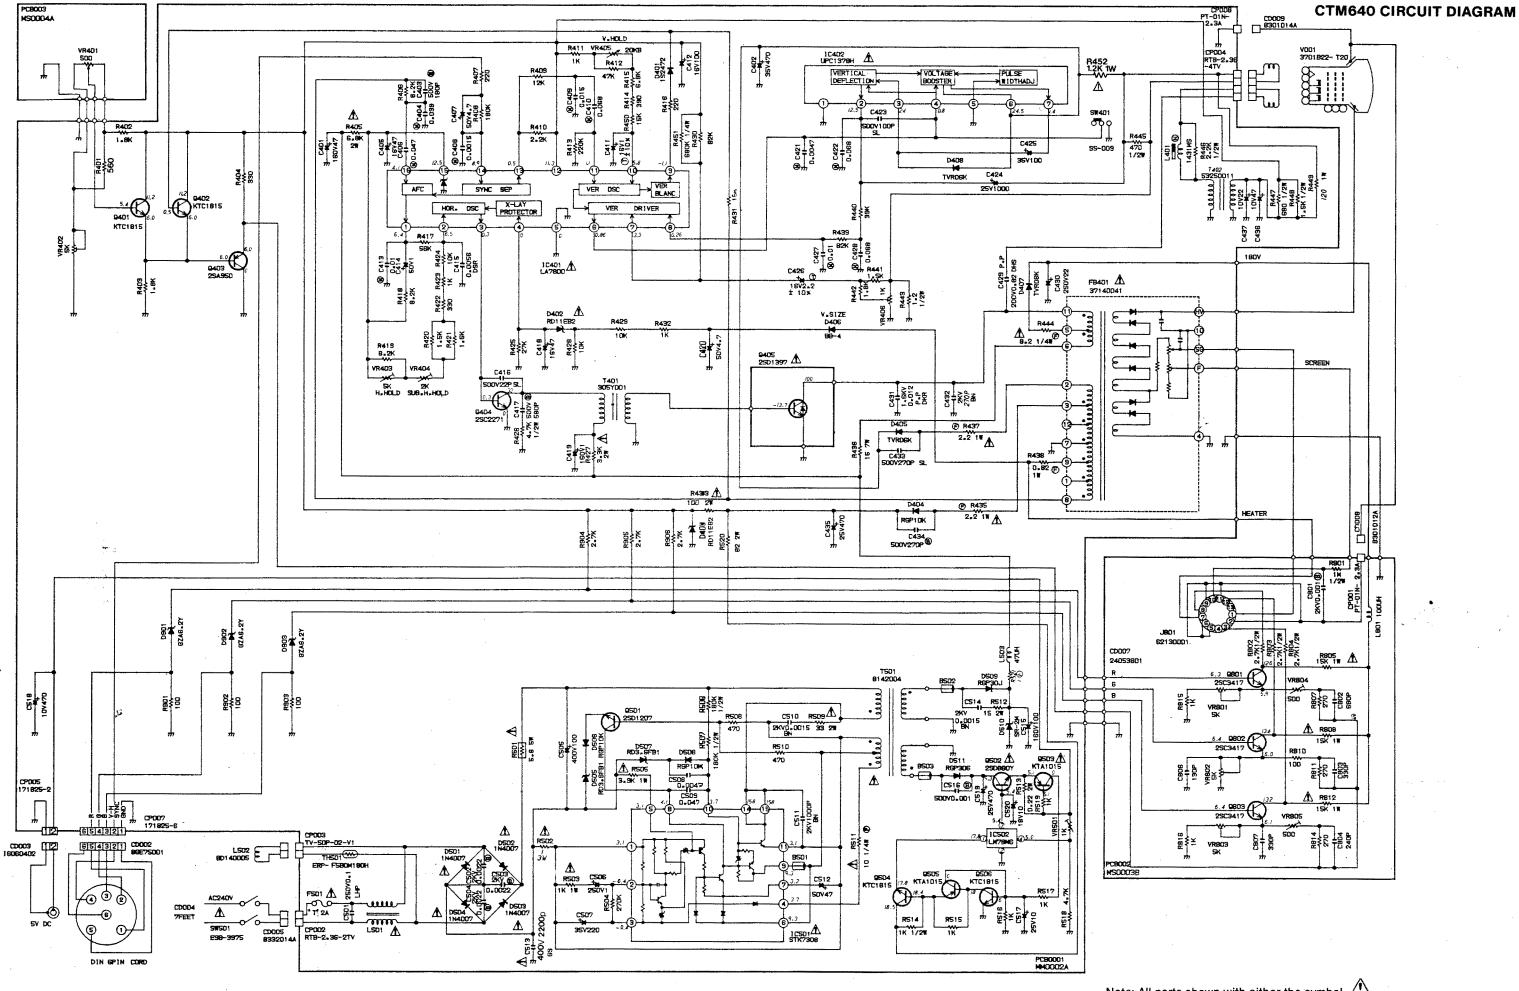

Note: All parts shown with either the symbol or with an 'S' prefix on the part numbers; are safety critical items and must be replaced with items having an identical safety specification. All these items may be purchased direct from AMSTRAD CONSUMER ELECTRONICS PLC.